

Change settings

Toggle the **volume, speed and tone/pitch** settings Press **Power** button, **Up** button to Increase amount, **Down** button to decrease.

The Power button toggle mode defaults back to Volume within few seconds.

Basic keys

- 1 **Bookshelf** if pressed, **User Guide** if pressed and held
- 2 Navigation element
- 3 Delete or Copy
- 4 Navigate Backward
- 5 Where am I?
- 6 Navigate Forward
- 7 Press for **Menu** or **Text-to-Speech voice Toggle** if pressed and held
- 8 Navigation Element
- 9 Text-to-Speech / Recorded audio modes toggle / Random mode toggle (Music)
- 0 **Info** if pressed, **Key Describer Mode** if pressed and held
- * **Cancel** if pressed, **Key pad Lock** if pressed and held
- # Confirm

To unlock the keypad, press keys 1, 2, and 3 in sequence.

Bookshelf

- 1 key Press multiple times to rotate through the circular list of Bookshelves
- Go To key To enter a relative book number (above key 1)
- # To move to the entered book number and remain on the bookshelf
- Play key Start to play from where you left off in the selected book
- Go to key When in Bookshelf the **Go to Page** key becomes a **Go to Book** key

Inside a Book

- 2 and 8 keys To choose a navigation level
- 4 and 6 keys To move backward and forward between elements at the selected level
- * within 10 seconds to undo the 4 and 6 key actions

These differ from book to book but typically level 1 means chapter, level 2 means section, and level 3 means sub-section and so on.

Delete a book

- 3 To delete the selected item and Stream will ask you to confirm.
- key Press the Pound (#) key to delete or any other key to cancel the delete.

Language and voices

- 7 (press and hold) To select an alternate Text-to-Speech voice installed in your Stream
- 7 (press repeatedly) To access the language menu
- 4 or 6 To cycle through choices
- Confirm To save choice

Hard reset

Power key for 2 seconds will not power down the player, keeping the key held for the required hard reset time will still perform a hard reset on release.

