

### Change settings

Toggle the **volume**, **speed** and **tone/pitch** settings Press **Power** button, **Up** button to Increase amount, **Down** button to decrease.

The Power button toggle mode defaults back to Volumn within few seconds.

### Basic keys

- 1 **Bookshelf** if pressed, **User Guide** if pressed and held
- 2 Navigation element
- 3 Delete or Copy
- 4 Navigate Backward
- 5 Where am I?
- 6 Navigate Forward
- 7 Press for **Menu** or **Text-to-Speech voice Toggle** if pressed and held
- 8 Navigation Element
- 9 Text-to-Speech / Recorded audio modes toggle / Random mode toggle (Music)
- 0 **Info** if pressed, **Key Describer Mode** if pressed and held
- \* **Cancel** if pressed, **Key pad Lock** if pressed and held
- # Confirm

To unlock the keypad, press keys 1, 2, and 3 in sequence.

### Bookshelf

- |                         |   |
|-------------------------|---|
| 1 key                   | Press multiple times to rotate through the circular list of Bookshelves     |
| Go To key (above key 1) | To enter a relative book number   |
| #                       | To move to the entered book number and remain on the bookshelf              |
| Play key                | Start to play from where you left off in the selected book                  |
| Go to key               | When in Bookshelf the <b>Go to Page</b> key becomes a <b>Go to Book</b> key |

### Inside a Book

- |              |   |
|--------------|---|
| 2 and 8 keys | To choose a navigation level  |
| 4 and 6 keys | To move backward and forward between elements at the selected level |
| *            | within 10 seconds to undo the 4 and 6 key actions                   |

These differ from book to book but typically level 1 means chapter, level 2 means section, and level 3 means sub-section and so on.

### Delete a book

- |     |  |
|-----|--|
| 3   | To delete the selected item and Stream will ask you to confirm.          |
| key | Press the Pound (#) key to delete or any other key to cancel the delete. |

### Language and voices

- |                      |  |
|----------------------|--|
| 7 (press and hold)   | To select an alternate Text-to-Speech voice installed in your Stream |
| 7 (press repeatedly) | To access the language menu  |
| 4 or 6               | To cycle through choices   |
| Confirm              | To save choice   |

### Hard reset

Power key for 2 seconds will not power down the player, keeping the key held for the required hard reset time will still perform a hard reset on release.

