

Basics

Router> user mode

Router>**enable**

Router# privileged mode

Router#**configure terminal**

Router(config)# global configuration mode

Router(config)#**hostname RTR1**

RTR1(config)#

Note that these commands work on Cisco routers and switch

Passwords

RTR(config)#**enable password cisco**

| set enable password

RTR(config)#**enable secret mysecret**

| set enable secret password

RTR(config)#**line console 0**

| enter console line mode

RTR(config-line)#**password myconpwd**

| set console password

RTR(config-line)#**login**

| require password to be entered

RTR(config)#**service password-encryption**

| hashes passwords so they aren't readable in configs

