

Basic

User EXEC mode	Router>
Privileged EXEC mode	Router> enable
Change hostname	Router# hostname NAME
Global configuration mode	Router# configure terminal
Password Privileged EXEC mode	Router(config)# enable secret PASSWORD
Exit privileged EXEC mode	Router# disable

Interface configuration mode

Configure interface	Router(config)# interface type number
---------------------	---------------------------------------



By **mianrelie**
cheatography.com/mianrelie/

Not published yet.
Last updated 14th August, 2016.
Page 1 of 1.

Sponsored by **CrosswordCheats.com**
Learn to solve cryptic crosswords!
<http://crosswordcheats.com>