

<b>From Off Advanced Mode</b> 1C On (ramp mode, memorized level) 1H On (ramp mode, floor level) 2C On (ramp mode, ceiling level) 2H On (momentary turbo) 3C Battcheck mode 3H Strobe mode (whichever was used last) 4C Lockout mode 5C Momentary mode 7C Aux LEDs: Next pattern 7H Aux LEDs: Next color 9H Misc config menu (varies per light) 10H Simple UI Ramp Config Menu 13H Factory reset (on some lights) 15C Version check	<b>Battery Check Mode (3C)</b> 1C Off 2C Next mode (Temp check, Beacon, SOS) 7H Voltage Config Menu <b>Misc Config 9H from Off</b> 1 Tint 0 = smooth ramp style 1 = toggle 2 Jump Start level 1 to 150, usually between 20 and 50	<b>Ramp Config Menu (Smooth) 7H from On</b> 1 Floor (default = 1/150) 2 Ceiling (default = 120/150) 3 Ramp Speed (default = 1, fastest speed) <b>Ramp Config (Stepped) 7H from On</b> 1 Floor (default = 20/150) 2 Ceiling (default = 120/150) 3 # of steps (default = 7) <b>Lockout</b> 1C/1H Momentary moon (lowest floor) 2C/2H Momentary moon (highest floor, or manual mem level) 3C Unlock (go to "Off" mode) 4C On (ramp mode, memorized level) 4H On (ramp mode, floor level) 5C On (ramp mode, ceiling level) 7C Aux LEDs: Next pattern 7H Aux LEDs: Next color 10H Auto-lock config menu: 1 click == 1 min	<b>Strobe Mode 3H from Off</b> 1C Turn Off 2C Next Mode 1H Increase Brightness/Strobe 2H Decrease Brightness/Strobe 5C Momentary Mode Candle -> Bike -> Party -> Tactical -> Lightning <b>Aux Colors</b> 7H from Off or Lockout - Red - Yellow (Red+Green) - Green - Cyan (Green+Blue) - Blue - Purple (Blue+Red) - White (Red+Green+Blue) - Disco - Rainbow - Voltage
<b>Simple UI Ramp Config Menu 7H from Off</b> 1 Floor (default = 20/150) 2 Ceiling (default = 120/150) 3 Steps (default = 5) 4 Turbo (default = 0, no Style turbo)	<b>Ramp Mode (On)</b> 1C On 1H Ramp (up, with reversing) 2H Ramp (down) 2C Go to/from ceiling or turbo 3C Change ramp style (smooth / stepped) 3H Tint ramping (on some lights) / Momentary turbo (on lights without tint ramping) 4C Lockout mode 5C Momentary mode 5H Sunset Timer and Add 5 Mins 7H Ramp config menu (1: floor, 2: ceiling, 3: speed/-steps) 10C Turn on manual memory and save current brightness 10H Ramp Extras config menu		

