Cheatography

Anduril 2 flashlight Cheat Sheet by petong via cheatography.com/173778/cs/36511/

Fro		Batt	te			
1C	On (ra	On (ramp mode,				
	memo	memorized level)				
1H	On (ra level)	On (ramp mode, floor				
2C	,	On (ramp mode, ceiling				
20	level)					
2H	On (m	On (momentary turbo)				
3C	Battch	Battcheck mode				
3H		Strobe mode (whichever was used last)				
4C	Lockou	Lockout mode				
5C	Mome	Momentary mode				
7C	Aux LE	Aux LEDs: Next pattern				
7H	Aux LE	Aux LEDs: Next color				
9H	Misc c	Misc config menu (varies				
	per lig	per light)				
10	H Simple Menu	Simple UI Ramp Config Menu				
13ł		Factory reset (on some				
454	- ,	lights)				
15C Version check						
Simple UI Ramp Config Menu						
7H	from Off					
1	Floor	(default =				
		20/150)	4	4C		
2	Ceiling	(default =	ł	5C		
	-	120/150)	!	5H		
3	Steps	(default = 5)				
4	Turbo Style	(default = 0, no turbo)		7H		
			-			

			_					
Battery Check Mode (3C)				Ramp Config Menu (Smooth)				
1C	Off			7H from On				
2C	Next mode (Temp check,		1	Floo	r	(default = 1/150	D)	
	Beacon, SOS)		2	Ceili	ng	(default = 120/150)		
7H Voltage Config Menu			0	-		,		
Misc Config 9H from Off			3	Ramp Speed		(default = 1, fastest speed)		
1 1	Tint	0 = smooth						
	amp style	1 = toggle	Ramp Config		Stepped) 7H fro	m		
	lump Start	1 to 150, usually between 20 and	1	Floor (default = 20/150)		(default = 20/150)		
10	evel	50	2	Ceili	iling (default = 120/150)			
Ram	p Mode (On)		3	# of		(default = 7)		
1C	On			steps				
1H	Ramp	amp (up, with						
	reversi	ng)	Lockout					
2H	Ramp	Ramp (down)		/1H	Momentary moon (lowest floor)			
2C Go to/from ce		rom ceiling or	20	/2H	Momentary moon (highest floor, or			
		turbo		211				
3C	-	Change ramp style (smooth / stepped)			manual mem level)			
3H	Tint rar	Tint ramping (on some lights) / Momentary turbo (on lights without tint ramping)			Unlock (go to "Off" mode)			
					On (ramp mode,			
					memorized level)			
4C	Lockou	Lockout mode			On (ramp mode, floor			
5C	Momer	Momentary mode			level)			
5H	Sunset Mins	Sunset Timer and Add 5		5C		On (ramp mode, ceiling level)		
7H	Ramp config menu (1:		7C		Aux LEDs: Next pattern			
	steps)	floor, 2: ceiling, 3: speed/- steps)		7H Aux LEDs:		EDs: Next colo	r	
10C	and sa	Turn on manual memory and save current		Η	Auto-lock config menu: 1 click == 1 min		iu:	
	brightn							
10H	Ramp menu	Extras config						

Strobe Mode 3H from Off

1C	Turn Off
2C	Next Mode

- Increase Brightness/S-1H trobe
- Decrease Brightness/S-2H trobe

5C Momentary Mode

Candle -> Bike -> Party -> Tactical -> Lightning

Aux Colors

7H from Off or Lockout

- Red

- Yellow (Red+Green)
- Green
- Cyan (Green+Blue)
- Blue
- Purple (Blue+Red)
- White (Red+Green+Blue)
- Disco
- Rainbow
- Voltage

By petong cheatography.com/petong/ Not published yet. Last updated 14th January, 2023. Page 1 of 1.

Sponsored by Readable.com Measure your website readability! https://readable.com