

Washing Machines Set Up.				Washing Machine Set Up Continued.				Soap Block or Whatever It Is.		
Water Level	Soil Level	Tempature	Option	Cycles				Soap	Softner	Color Safe Bleach
King size load	Regular Soil	Warm/E-nergy Saver	One Rinse Warm	Push Handle in, Turn Handle to 'Normal', Pull the Handle out.				Fill the cup with soap, and then dump the cup under the water at the time.	Fill the cup Half way, and then dump it into the hole in the middle of the washer.	Fill the cup Half way, and then dump it into the hole on the Right of the washer.
Varies by the amount of clothes you want to wash at the time.	Turn to 'Ultra Soil' if clothes are covered in dirt.	If the clothes are all sweaty and stinky then put the setting on 'Warm'. If you are putting towels or any bedding in, turn to 'Energy Saver' or 'Warm'.	I dont see the point in rinsing clothes two times...	Push in the Handle to 'Pause' the wash.	Setting it up to use.			Rinse out cup a few times.	Rinse out cup a few times.	Rinse out cup a few times.
Setting it up to use.				Before You Put In The Washer.				Soaps and stuff to put in to make your clothes clean.		
				Check the pockets of the pants , shirts, and shorts.	Tie strings that are on pants, and those kinds of things.	Put the clothes in Spread around so that they are at the same height.	MAKE SURE THAT THE WASHER IS EMPTY BEFORE YOU START IT!!!!!!			
				Check list.						



By Todd Town (Zmanwrestler)

cheatography.com/zmanwrestler/

Published 17th June, 2014.

Last updated 13th May, 2016.

Page 1 of 1.

Sponsored by [CrosswordCheats.com](http://crosswordcheats.com)

Learn to solve cryptic crosswords!

<http://crosswordcheats.com>